


Moteur triphasé autofreinant DC-AC Self (DC-AC) brake three-phase motors

Tab. 31

Moteur triphasé autofreinant (DC) / Self (DC) brake three-phase motor

Alimentation directe / Direct supply:

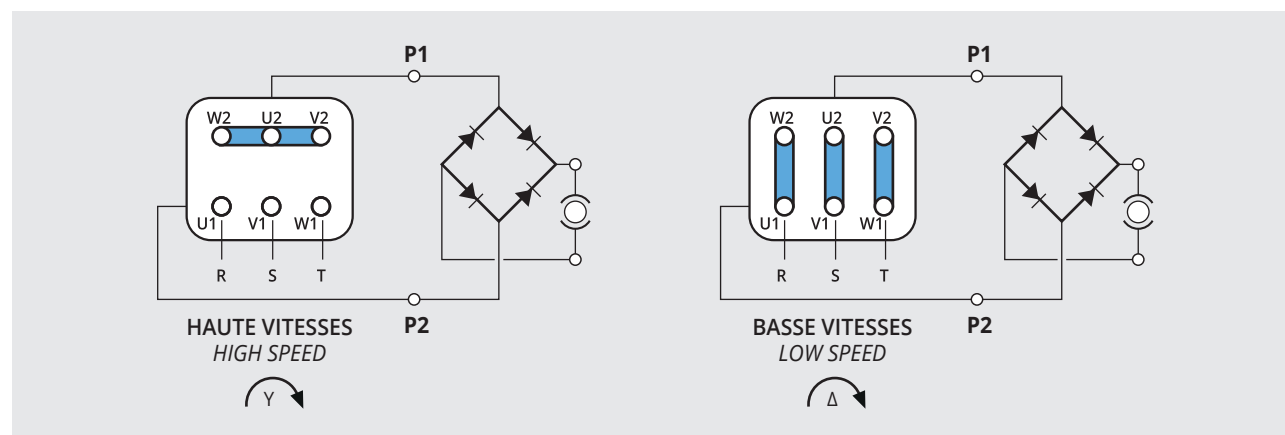

Alimentation séparée : brancher directement l'alimentation aux bornes P1 et P2

Separate supply: connect directly the supply to the terminals P1 and P2

Moteur triphasé autofreinant (AC) / Self (AC) brake three-phase motor

Alimentation directe / Direct supply:

Alimentation séparée / Separate supply:

